

P2000M Wordprocessor Text 2 (Cardridge P019 or P2301) disk usage

- Press Shift-8 to start floppy drive, cursor moves to 1st line (enter file name)
- Press 1 or 2 to select drive, press Tab to move into file name field
- For load or save: Enter file name, press Tab to move into extension field, enter extension
- Press Shift-1 for directory, Shift-4 to load or Shift-6 to save
- Special disk operations: Press Shift-8 and then Shift-Menu (key with envelope symbol in the upper right corner of the numeric keypad)
- Format disk: Use maintenance module, select menu 7 (floppy), then item 6 (format), use double density/single side format

Cassette Basic (Cardridge P2305) commands

- SHIFT-7 to format after confirmation of "Cassette wissen? (J/N)" with "J"
- SHIFT-1 for directory
- CSAVE "filename" to save
- CLOAD "filename" to load
- First program will automatically loaded if tape is present when computer is switched on

Disk Basic (Cardridge P2306) commands

- Note: Disk Basic requires a Basic boot disk
- Select disk drive: SYSTEM A or SYSTEM B
- Directory: FILES
- Notify system that disks are changed: RESET
- Save file: SAVE "file"
- Load file: LOAD "file"
- Volume/disk management: RUN "B:VOLORG" (using special VOLORG disk)
- Clear screen: PRINT CHR\$(12)
- Position cursor: PRINT CHR\$(4); CHR\$(line); CHR\$(column)

Notes

- Program cardridges work in both models
- FDD interface board also works in P2000T

Connect P2000T to Scart


(<https://www.retrogamingcables.co.uk/trouble-shooting-guide-for-rgb-scart-cables>)

- Ensure that trigger signal (1-3 Volt) is present at Scart pin 16 (i.e. connect an AA or AAA battery to this pin).

Connect P2000M to Commodore 1084


- P2000M Pin 1+2 (GND) to Commodore Pin 1+2
- P2000M Pin 3 (Hsync) to Commodore Pin 7+8
- P2000M Pin 4 (Video) to Commodore Pin 4 (Green)
- P2000M Pin 5 (Vsync) to Commodore Pin 9

Pin	TTL RGB	Analog RGB
1	Ground	Ground
2	Ground	Ground
3	Red	Red
4	Green	Green
5	Blue	Blue
6	Intensity	Fast blanking
7	Not used	Composite Sync.
8	H. Sync.	H. Sync.
9	V. Sync.	V. Sync.

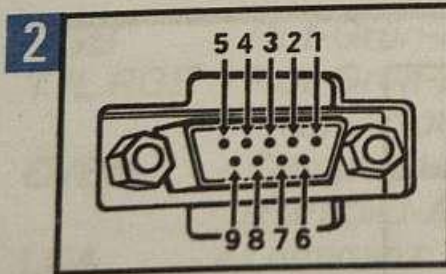

Video P2000M		RGB P2000T	
1	0 v	1	Verde
2	0 v	2	SYNC
3	HORSYNC	3	0 v
4	Video	4	Rojo
5	VERSYNC	5	Azul
		6	Audio

Scart-Kabel

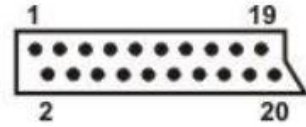

Sicht auf Lötseite Stecker Sicht auf Lötseite Stecker

DIN6m	Scart	Signal
4 (330Ω)	15	R
1 (330Ω)	11	G
5 (330Ω)	7	B
2 (330Ω)	20	Sync
6	2, 6	Audio
3	4, 17	GND

Activate RGB Input on TV Scart connector:
 Ensure that trigger signal (1-3 Volt) is present
 at Scart pin 16 (i.e. connect an AA or AAA
 battery PLUS to this pin and MINUS to pin 4)

